


Quick Start Guide

PSRR Measurement

Step 1-A: Plug in the AC power cord in the back (not shown)


Step 1-B: Turn on the TS200 by press the LINE button

Step 1-C: Enable the output by press the ON/OFF button

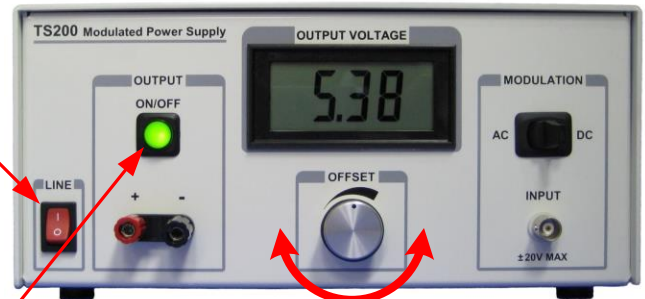

Step 1D: Turn the OFFSET knob to set the DC voltage

PSRR Measurement Connection Diagram

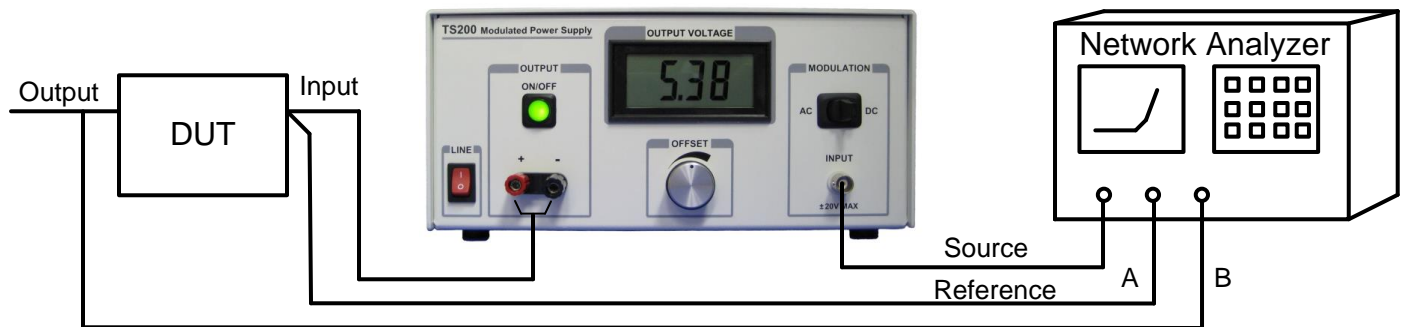

PSRR Measurement Circuit Diagram

